


SCR PRESELECTOR

Connection to Flex5000 radio. Diagram

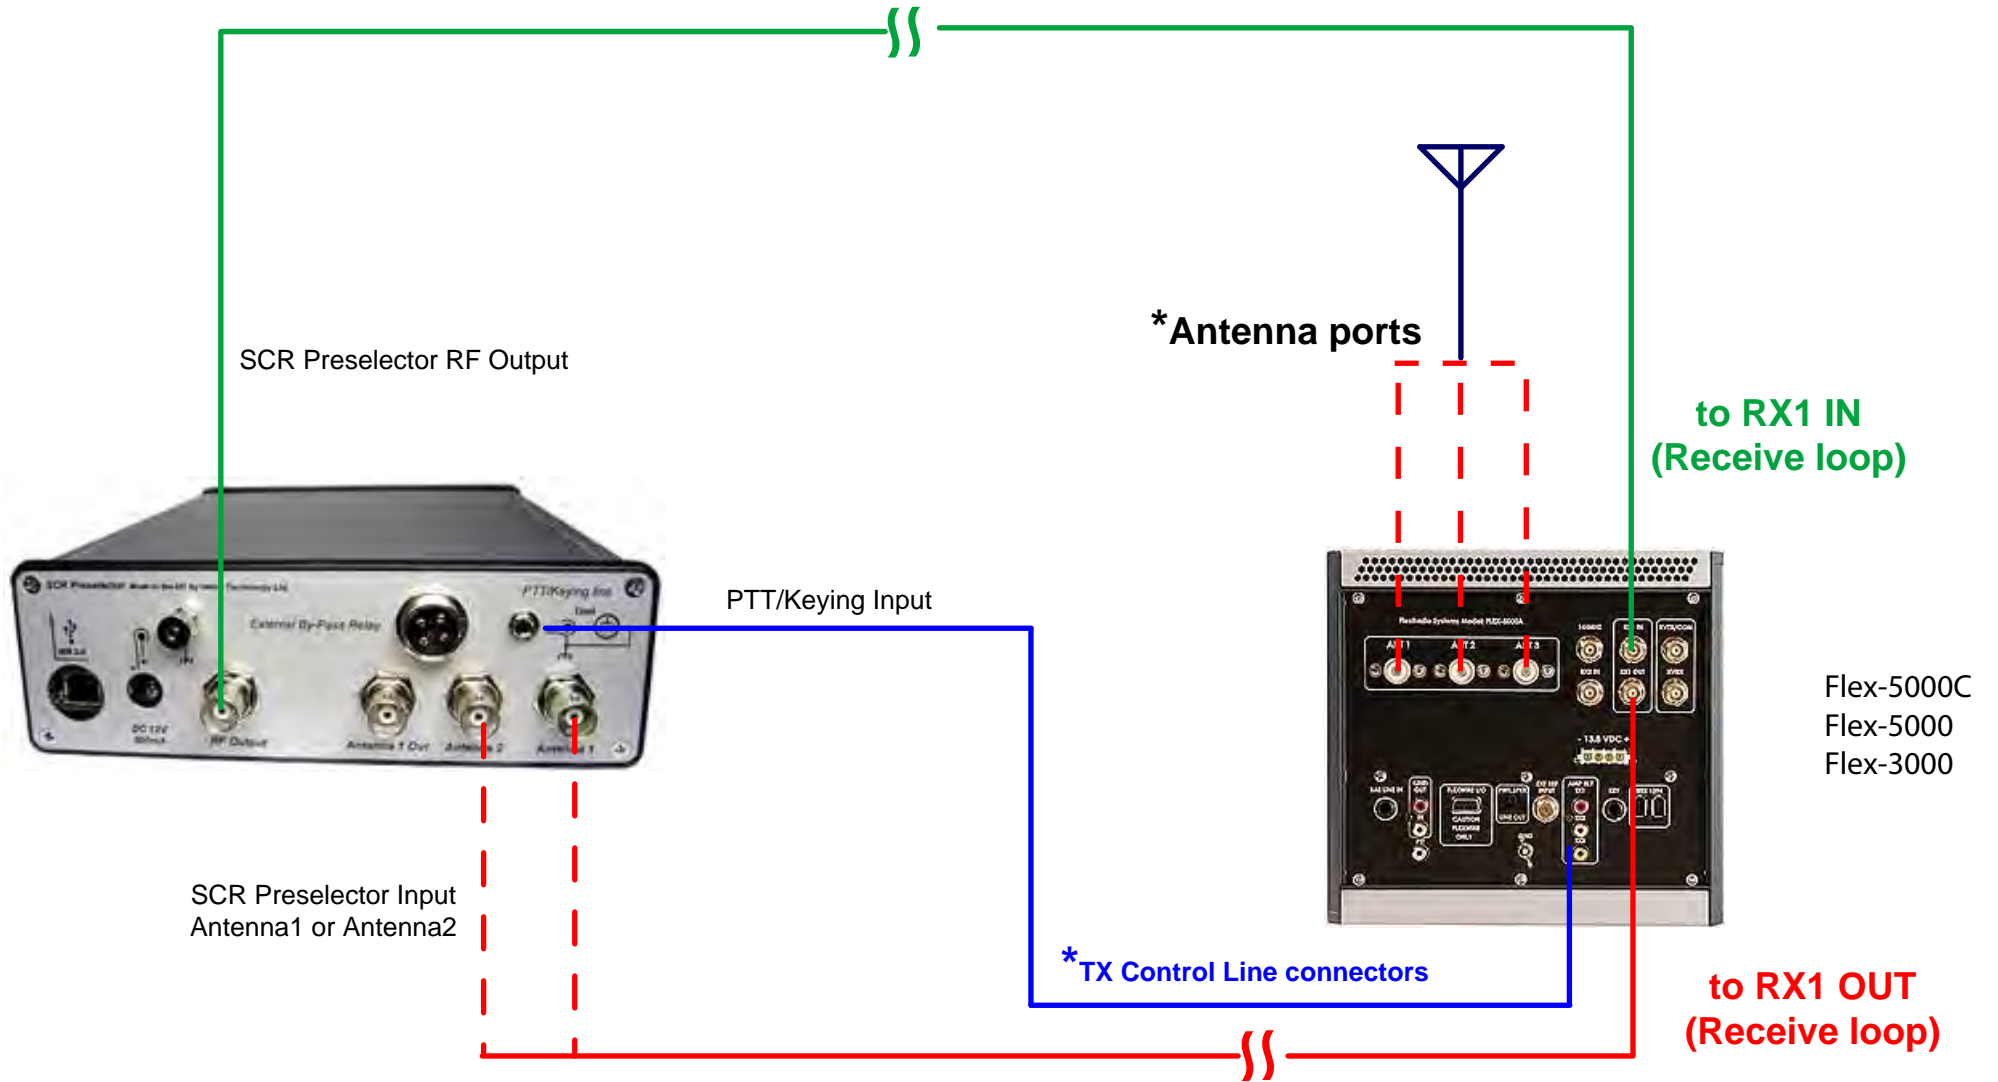


* (see Primary antenna ports configuration on FLEX-5000_Owners_Manual)

* (see External Keying Lines configuration on FLEX-5000_Owners_Manual)

SCR PRESELECTOR

Connection to Flex5000 radio. Diagram

RF 150 Watts. Dual relay for antenna by-pass
(model: Default NO By-Passed)

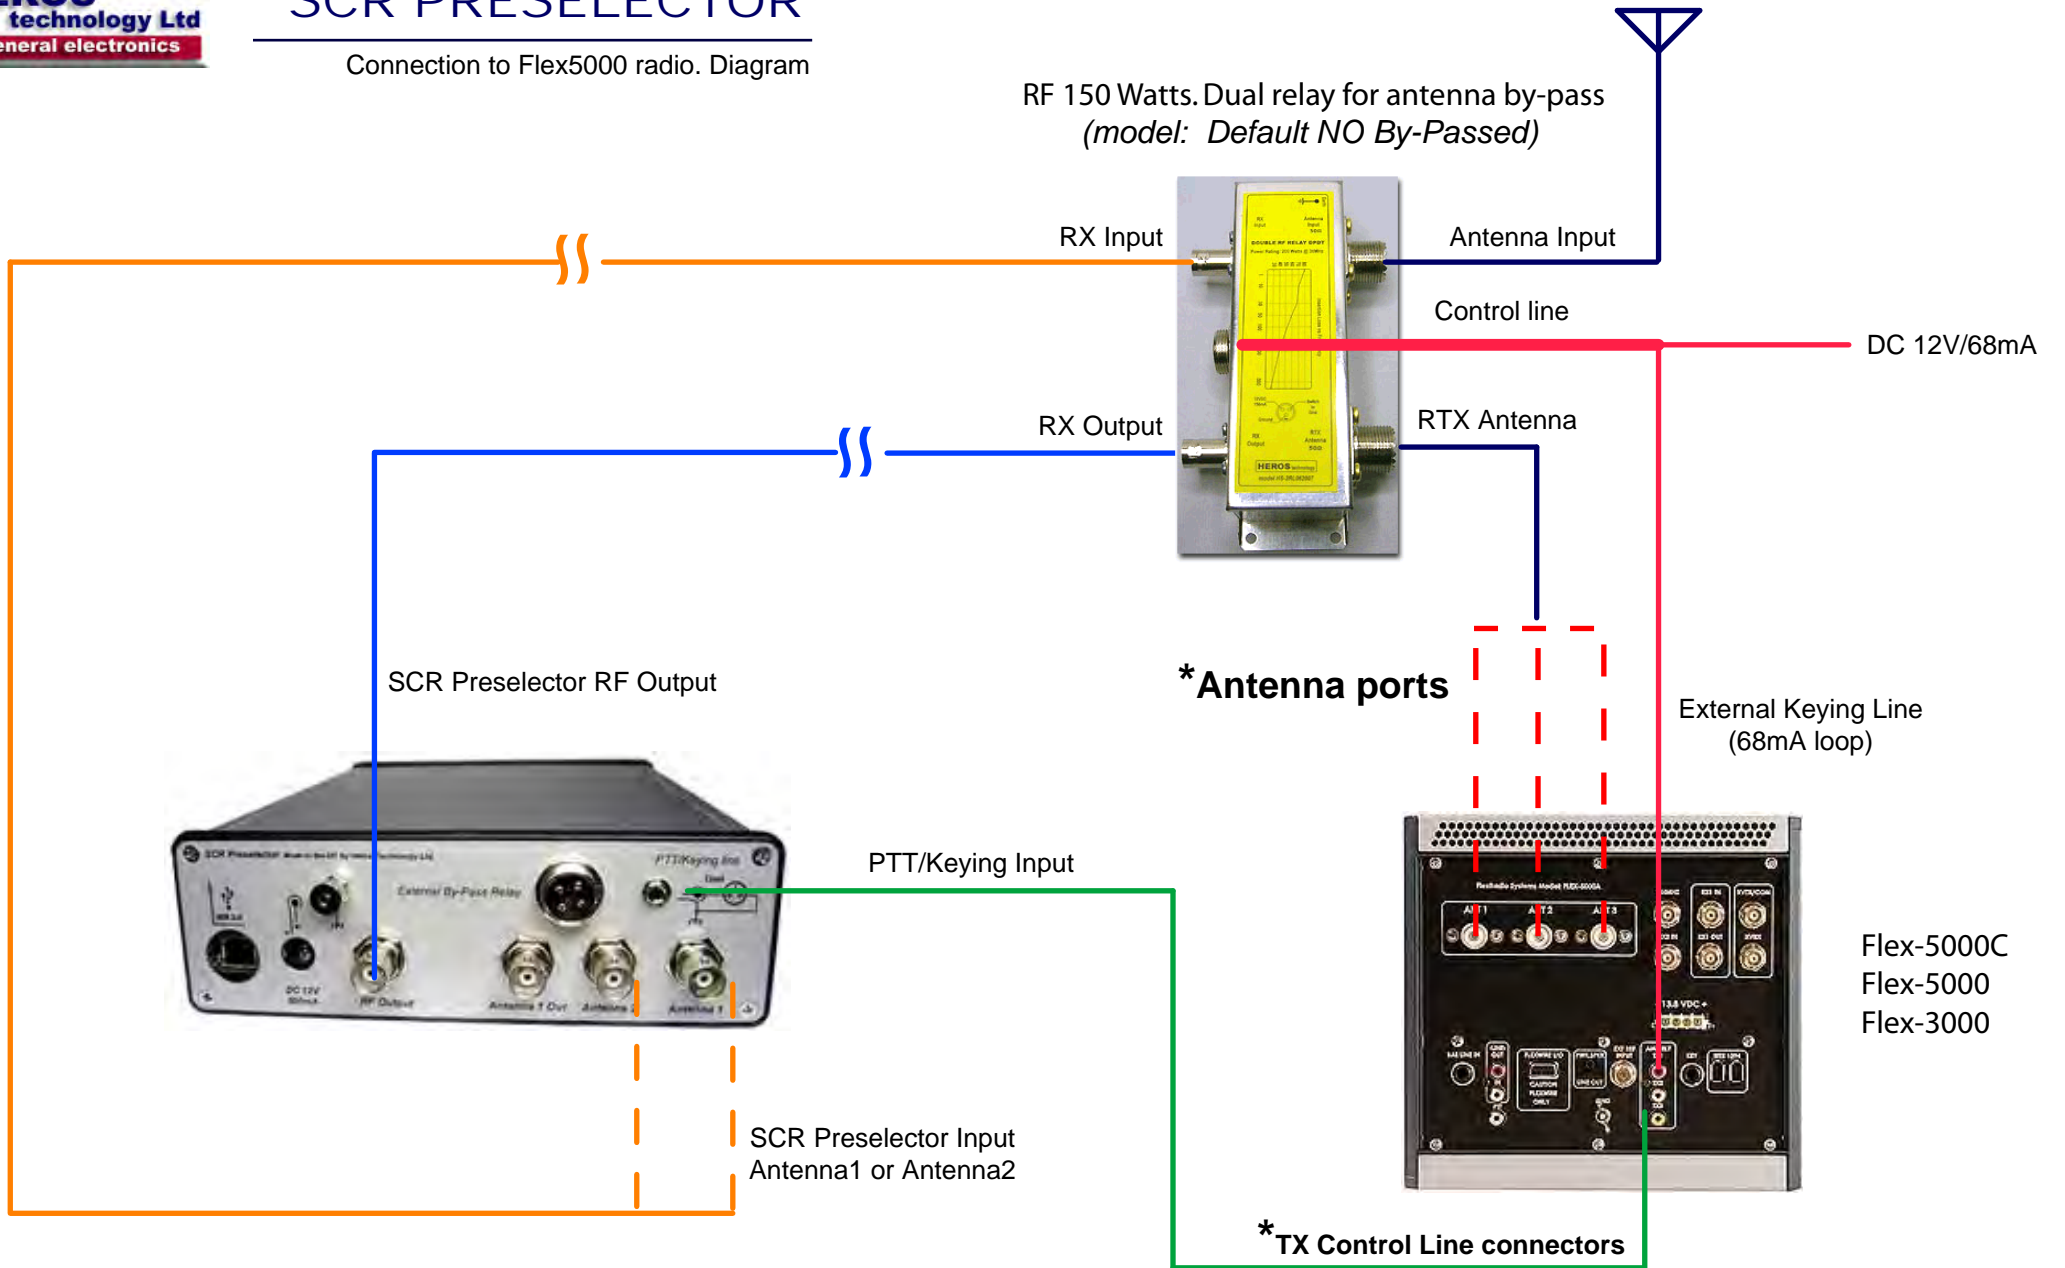

* (see Primary antenna ports configuration on FLEX-5000_Owners_Manual)

* (see External Keying Lines configuration on FLEX-5000_Owners_Manual)